



Tool to replace the needle bearing on small end of the connecting rod.

[Removing needle bearing]

1. Put the small end on the base (B) of the needle bearing tool and fit the needle bearing (A) into the hole of the base.
2. Push the bearing out from the small end using the smaller pusher (C).